智诚光电有限公司 LCD MODULE SPECIFICATION

Customer:		_
Model Name:	ZC070TN92V.X	_
Date:	2018/3/2	_
Version:	01	_
□Preliminary Sp ■ Final Specific		
Remark		一方限公

For Customer's Acceptance

Approved by	Comment

深超 COG+IC+15 灯背光 (200NITS)

Approved by	Reviewed by	Prepared by

Record of Revision

Version	Revise Date	Page	Content
	Date 2018/3/2	rage Ktill	Initial Release. THE WATER AND THE PROPERTY OF THE PROPERTY O

1. General Specifications

No.	Item	Specification	Remark
1	LCD size	7.0 inch(Diagonal)	
2	Driver element	a-Si TFT active matrix	
3	Resolution	800 × RGB ×480	
4	Display mode	Normally White, Transmissive	
5	Dot pitch	0.0642(W) × 0.1790(H) mm	
6	Active area	154.8(W) × 85.92(H) mm	
7	Module size	164.9(W) × 100(H) × 5.7(D) mm	H1
8	Surface treatment	Anti-Glare	
9	Color arrangement	RGB-stripe	
10	Interface	Digital	
11	Backlight Power consumption		
12	Panel Power consumption		
13	Weight		

2. Pin Assignment

2.1. TFT LCD Panel Driving Section

FPC connector is used for the module electronics interface. The recommended model is "FH26G-67S-0.3SHBW(05)" manufactured by Hirose.

"FH26G-67S-0.3SHBW(05)" manufactured by Hirose.					
Pin No.	Symbol	I/O	Function	Remark	
1	V_{LED+}	Р	Power for LED backlight anode		
2	V_{LED+}	Р	Power for LED backlight anode		
3	V_{LED}	Р	Power for LED backlight cathode		
4	V_{LED}	Р	Power for LED backlight cathode		
5	GND	Р	Power ground		
6	VCOM	I	Common voltage		
7	DVDD	Р	Power for Digital Circuit		
8	MODE	_	DE/SYNC mode select		
9	DE T	1	Data Input Enable		
10	VS	VINC	Vertical Sync Input		
11	HS	-	Horizontal Sync Input		
12	В7	I	Blue data(MSB)		
13	B6	I	Blue data		
14	B5	-	Blue data		
15	B4	I	Blue data		
16	В3	I	Blue data		
17	B2	I	Blue data		
18	B1	I	Blue data		
19	В0	I	Blue data(LSB)		
20	G7	I	Green data(MSB)		

Date:2018/3/2 Page:2/25

O D IT IN A			2 at 0 1.20 1.07 07 2 1 ag 0.11 2 2
21	G6	_	Green data
22	G5	I	Green data
23	G4	I	Green data
24	G3	I	Green data
25	G2	I	Green data
26	G1	I	Green data
27	G0	I	Green data(LSB)
28	R7	I	Red data(MSB)
29	R6	I	Red data
30	R5	I	Red data
31	R4	I	Red data
32	R3	I	Red data
33	R2		Red data
34	R1 =	出版	Red data
35	R0	MINIC	Red data
36	GND	Р	Power Ground
37	DCLK	I	Sample clock
38	GND	Р	Power Ground
39	L/R	I	Left / right selection
40	U/D	I	Up/down selection
41	VGH	Р	Gate ON Voltage
42	VGL	Р	Gate OFF Voltage
43	AVDD	Р	Power for Analog Circuit
44	RESET	I	Global reset pin.
45	NC	-	No connection

Date: 2018/3/2 Page: 3/25

光电有限公司			Date :2018/3/2 Page:3/25
46	VCOM	I	Common Voltage
47	DITHB	I	Dithering function
48	GND	Р	Power Ground
49	NC	-	No connection
50	NC	-	No connection
			上限公司
			力岩展有限
			EDITY HICS LIMITED
	-77	24111	市首LECTRONS
	17	VINC	EKL
). O. starret D. D	l	

I: Input, O: Output, P: Power

3. Operation Specifications

3.1. Absolute Maximum Ratings

(Note 1)

Item	Symbol	Val	ues	Unit	Remark	
item	Symbol	Min. Max.		Oilit	Kemark	
Dower voltage	AV_DD	6.5	13.5	V		
Power voltage	DV _{DD}	-0.3	5.0	V		
Input signal voltage	Logic input	-0.5	5.0	V		
Operation temperature	T _{OP}	-20	60	$^{\circ}\!\mathbb{C}$	Note 3, 4	
Storage temperature	T _{ST}	-20	70	$^{\circ}\!\mathbb{C}$	Note 3, 4	
LED Reverse Voltage	VR	-	9	V	Each LED Note 2	
LED Forward Current	lf	-	10.5	mA	Each LED	

3.2 Backlight Driving Conditions

ltom	Complete	Values			l lm:4	Domouk
Item	Symbol	Min.	Тур.	Max.	Unit	Remark
Voltage for LED Backlight	V_L	-	9.3	-	V	Note 2
Current for LED Backlight	Ι _L	_	140	_	mA	
LED life time	-	20,000	-	-	Hr	Note 1

Note 1: The "LED life time" is defined as the module brightness decrease to 50% original brightness that the ambient temperature is 25° C and I_L =40mA. The LED lifetime could be decreased if operating I_L is lager than 40 mA.

Note 2: The LED Supply Voltage is defined by the number of LED at Ta=25 $^{\circ}$ C and I_L =40mA.

 $DV_{DD} \rightarrow AV_{DD} \rightarrow STB \rightarrow Data \rightarrow B/L$

Note1: External Reset(RESET)

To prevent from abnormal reset condition, a glitch filter for RESET is embedded in this

5. Optical Specifications

ltom	Cumbal	Condition		Values		l lnit	Remark
Item	Symbol	Condition	Min.	Тур.	Max.	Unit	
	θ_{L}	Ф=180°(9 o'clock)	60	70	-		
Viewing angle	θ_{R}	Ф=0°(3 o'clock)	60	70	-	dograo	Note 1
(CR≥ 10)	θ_{T}	Φ=90°(12 o'clock)	40	50	-	degree	
	θ_{B}	Φ=270°(6 o'clock)	60	70	-		
Posponso timo	T _{ON}		ı	10	20	msec	Note 3
Response time	T_{OFF}		-	15	30	msec	Note 3
Contrast ratio	CR		400	500	那人	グロル	Note 4
	W _X	Normal	0.27	0.31	0.35	-	Note 2 Note 5 Note 6
	Wy		0.29	0.33	0.37		
	Rx		0.52	0.56	0.60	-	
Color chromaticity	Ry		0.29	0.33	0.37	-	
Color official attory	G _X	θ=Φ=0°	0.30	0.34	0.38	-	
	G _Y		0.55	0.59	0.63	-	
\	B _X		0.10	0.14	0.18	-	
	B _Y		0.04	0.08	0.12	-	
Luminance	L		180	200	-	cd/m²	Note 6
Luminance uniformity	Yu		70	75	-	%	Note 7
NTSC			45	50	-	%	
Flicker			-	-	-30	dB	Note 8

Test Conditions:

- 1. AV_{DD}=3.3V, DV_{DD}=1.8V, I_L=40mA (Backlight current), the ambient temperature is 25°C .
- 2. The test systems refer to Note 2.

Note 1: Definition of viewing angle range

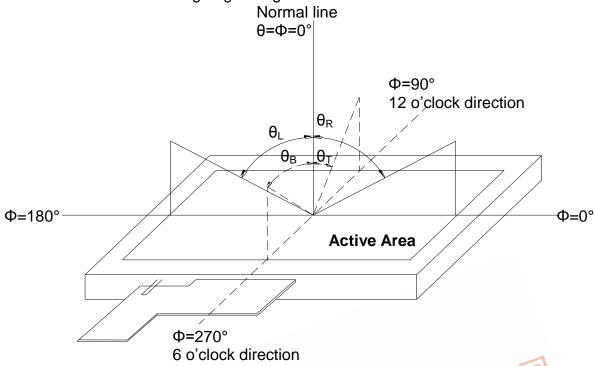


Fig. 4-1 Definition of viewing angle

Note 2: Definition of optical measurement system.

The optical characteristics should be measured in dark room. After 10 minutes operation, the optical properties are measured at the center point of the LCD screen. (Response time is measured by Photo detector TOPCON BM-7, other items are measured by BM-5A/Field of view: 1° /Height: 500mm.)

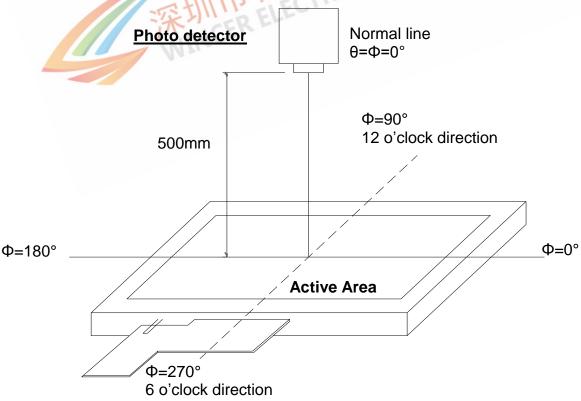


Fig. 4-2 Optical measurement system setup

Note 3: Definition of Response time

The response time is defined as the LCD optical switching time interval between "White" state and "Black" state. Rise time (T_{ON}) is the time between photo detector output intensity changed from 90% to 10%. And fall time (T_{OFF}) is the time between photo detector output intensity changed from 10% to 90%.

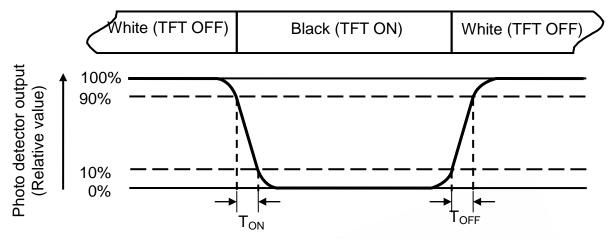


Fig. 4-3 Definition of response time

Note 4: Definition of contrast ratio

Contrast ratio (CR) = $\frac{\text{Luminance measured whenLCD on the "White" state}}{\text{Luminance measured whenLCD on}}$

Note 5: Definition of color chromaticity (CIE1931)

Color coordinates measured at center point of LCD.

Note 6: Definition of Luminance

Luminance = Summation of the 9 measuring poiluminar

This shall be measured on the 9 measuring point as shown in the Fig.4-4. The LED driving condition is I_L =40mA.

Note 7: Definition of Luminance Uniformity

Active area is divided into 9 measuring areas (Refer to Fig. 4-4). Every measuring point is placed at the center of each measuring area.

LuminanUcreiforn(iYtuy-)
$$\frac{B_{min}}{B_{max}}$$

L----- Active area length W----- Active area width

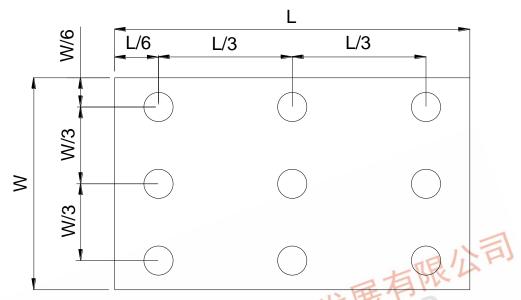


Fig. 4-4 Definition of measuring points

 \mathbf{B}_{max} : The measured maximum luminance of all measurement position. \mathbf{B}_{min} : The measured minimum luminance of all measurement position.

Note 8: Measured the center of panel by Photo detector K8.

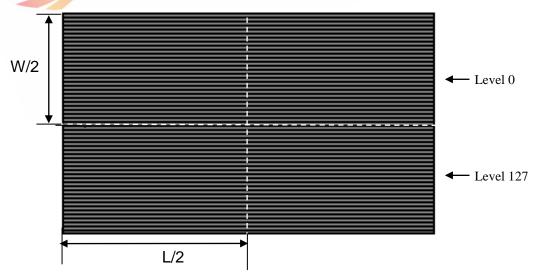


Fig. 4-5 Definition of flicker

Date: 2018/3/2 Page: 9/25

6. Reliability Test Items

(Note3)

Item	Test Conditions		Remark
High Temperature Storage	Ta = 70°C 2	240hrs	Note 1,Note 4
Low Temperature Storage	$Ta = -20^{\circ}C$	240hrs	Note 1,Note 4
High Temperature	$Ts = 60^{\circ}C$	240hrs	Note 2,Note 6
Operation	Ts = 60°C 7	72hrs	Note 2,Note 7
Low Temperature Operation	Ta = -20°C 2	240hrs	Note 1,Note 4
Operate at High Temperature and Humidity	-		Note 5
Thermal Shock	-20°C/30 min ~ +60°C/30 min for 100 cycles, Start with cold temperand end with high temperature		Note 4
Vibration Test	Frequency range:10~55Hz Stroke:1.5mm Sweep:10Hz~55Hz~10Hz 2 hours for each direction of X. (6 hours for total)	及公司	
Mechanical Shock	100G 6ms,±X, ±Y, ±Z 3 times fo direction	r each	
Package Vibration Test	Random Vibration: 0.015G*G/Hz from 5-200HZ, -6dB/Octave from 200-500HZ 2 hours for each direction of X. \((6 hours for total)		
Package Drop Test	Height:60 cm 1 corner, 3 edges, 6 surfaces		
Electro Static Discharge	± 2KV, Human Body Mode, 100pF/1500Ω		

- Note 1: Ta is the ambient temperature of samples.
- Note 2: Ts is the temperature of panel's surface.
- Note 3: In the standard condition, there shall be no practical problem that may affect the display function. After the reliability test, the product only guarantees operation, but doesn't guarantee all the cosmetic specification.
- Note 4: Before cosmetic and function test, the product must have enough recovery time, at least 2 hours at room temperature.
- Note 5: Before cosmetic and function test, the product must have enough recovery time, at least 24 hours at room temperature.
- Note 6: Before cosmetic tests, the product must have enough recovery time, at least 2 hours at room temperature.
- Note 7: After the reliability test, the product only guarantees operation. Before the cosmetic and linearity of touch screen panel test, the product must have enough recovery time, at least 24 hours at room temperature.

智诚光电有限公司 Date:2018/3/2 Page:10/25

7. General Precautions

7.1. Safety

Liquid crystal is poisonous. Do not put it in your mouth. If liquid crystal touches your skin or clothes, wash it off immediately by using soap and water.

7.2. Handling

- 1. The LCD panel is plate glass. Do not subject the panel to mechanical shock or to excessive force on its surface.
- 2. The polarizer attached to the display is easily damaged. Please handle it carefully to avoid scratch or other damages.
- 3. To avoid contamination on the display surface, do not touch the module surface with bare hands.
- 4. Keep a space so that the LCD panels do not touch other components.
- 5. Put cover board such as acrylic board on the surface of LCD panel to protect panel from damages.
- 6. Transparent electrodes may be disconnected if you use the LCD panel under environmental conditions where the condensation of dew occurs.
- 7. Do not leave module in direct sunlight to avoid malfunction of the ICs.

7.3. Static Electricity

- 1. Be sure to ground module before turning on power or operating module.
- 2. Do not apply voltage which exceeds the absolute maximum rating value.

7.4. Storage


- 1. Store the module in a dark room where must keep at 25±10°C and 65%RH or less.
- 2. Do not store the module in surroundings containing organic solvent or corrosive gas.
- 3. Store the module in an anti-electrostatic container or bag.

7.5. Cleaning

- 1. Do not wipe the polarizer with dry cloth. It might cause scratch.
- 2. Only use a soft sloth with IPA to wipe the polarizer, other chemicals might permanent damage to the polarizer.

Date: 2018/3/2 Page: 11/25

8. Mechanical Drawing

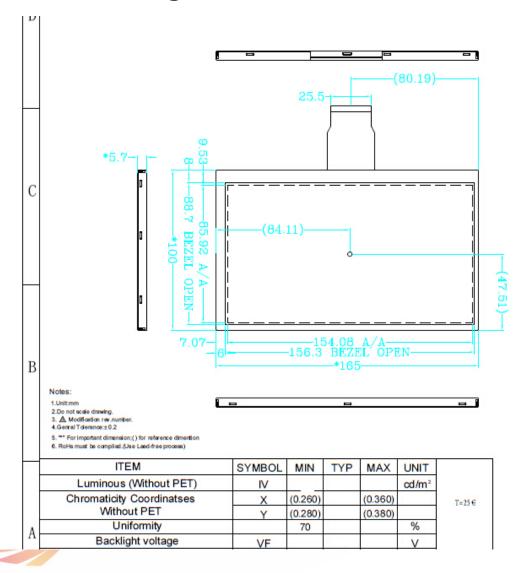

9. Package Drawing

9.1. Packaging Material Table

No	Item	Model (Material)	Dimensions(mm)	Unit Weight (Kg)	Quantity (pcs)	Remark
1	LCM	ZC070TN92 V.X	45*35*15	12.55	60	
2						

Page:12/25

1 997 B B 17 K B 1			2 010 120 107 07 2	_ : age::=,=e			
4							
5					1		
7					1		
8							

